


## Installation Guide


### HRB, HRE, HFE




MAINTENANCE FREE

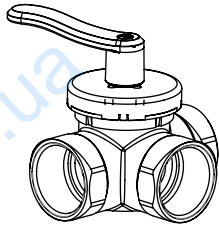











HRB 3, HRB 4 (DN 15-50)  
HRE 3, HRE 4 (DN 20-50)

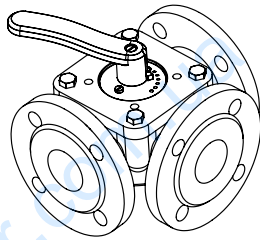

HFE 3 (DN20-150)

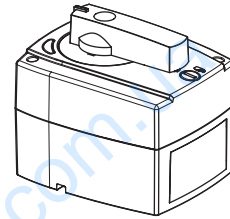


AMB 162/182

 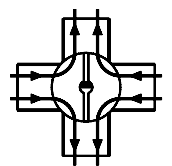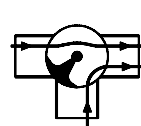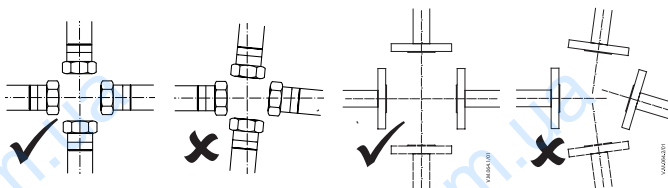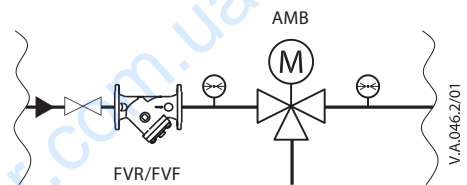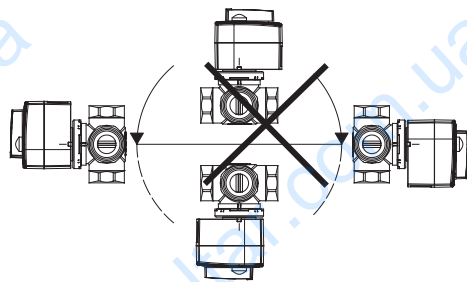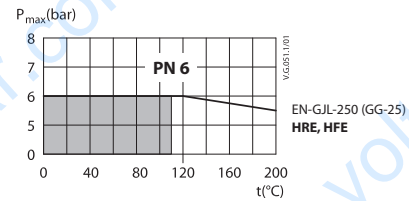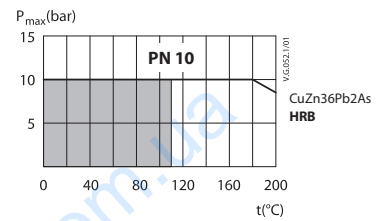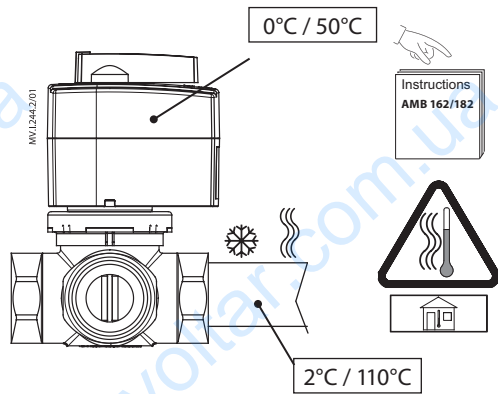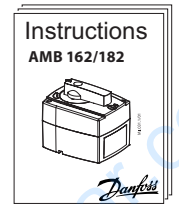


Installation Guide HRB, HRE, HFE

HRB, HRE

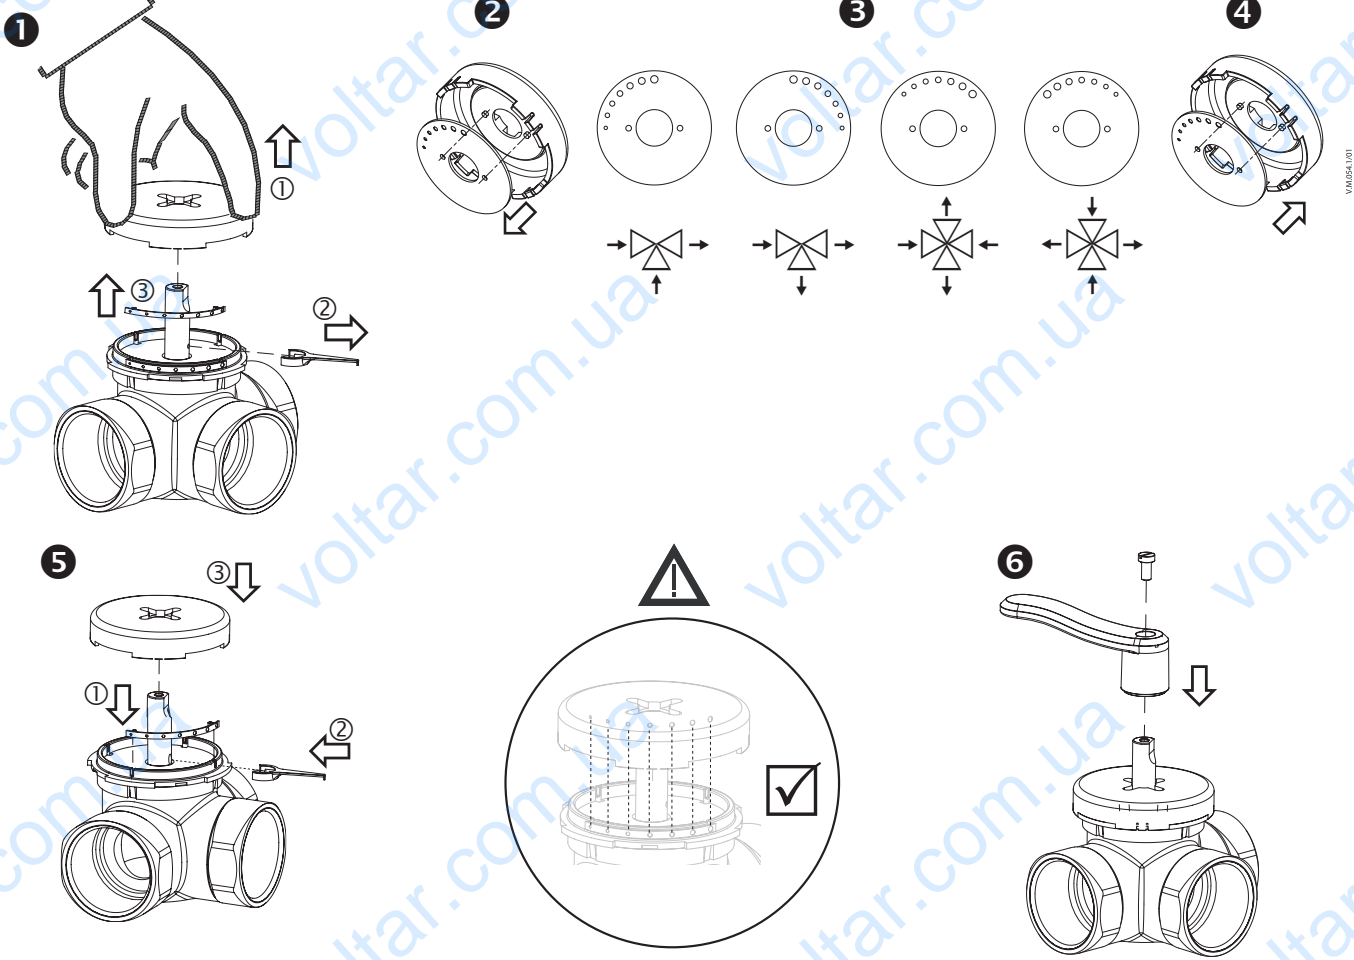


HRB, HRE + AMB 162/182

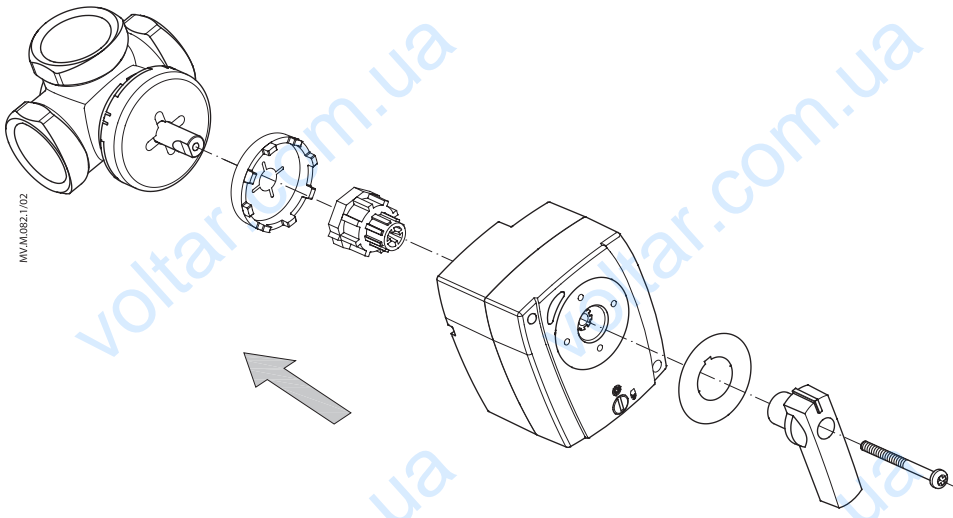


**Installation Guide HRB, HRE, HFE**

**HFE**


**1**

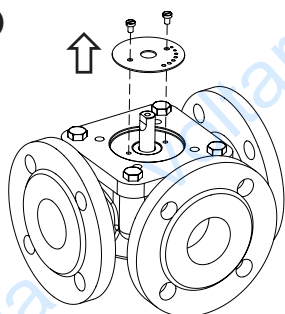


**2**

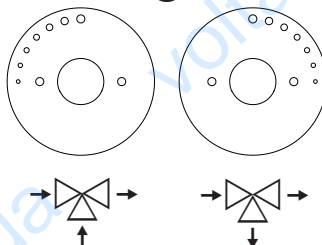


**3**

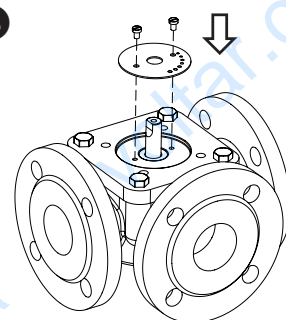

**4**

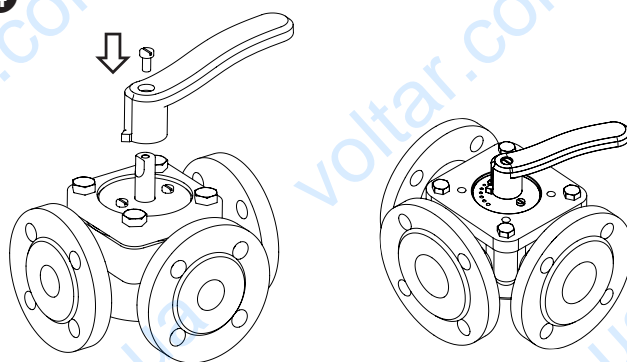


**HFE + AMB 162/182**

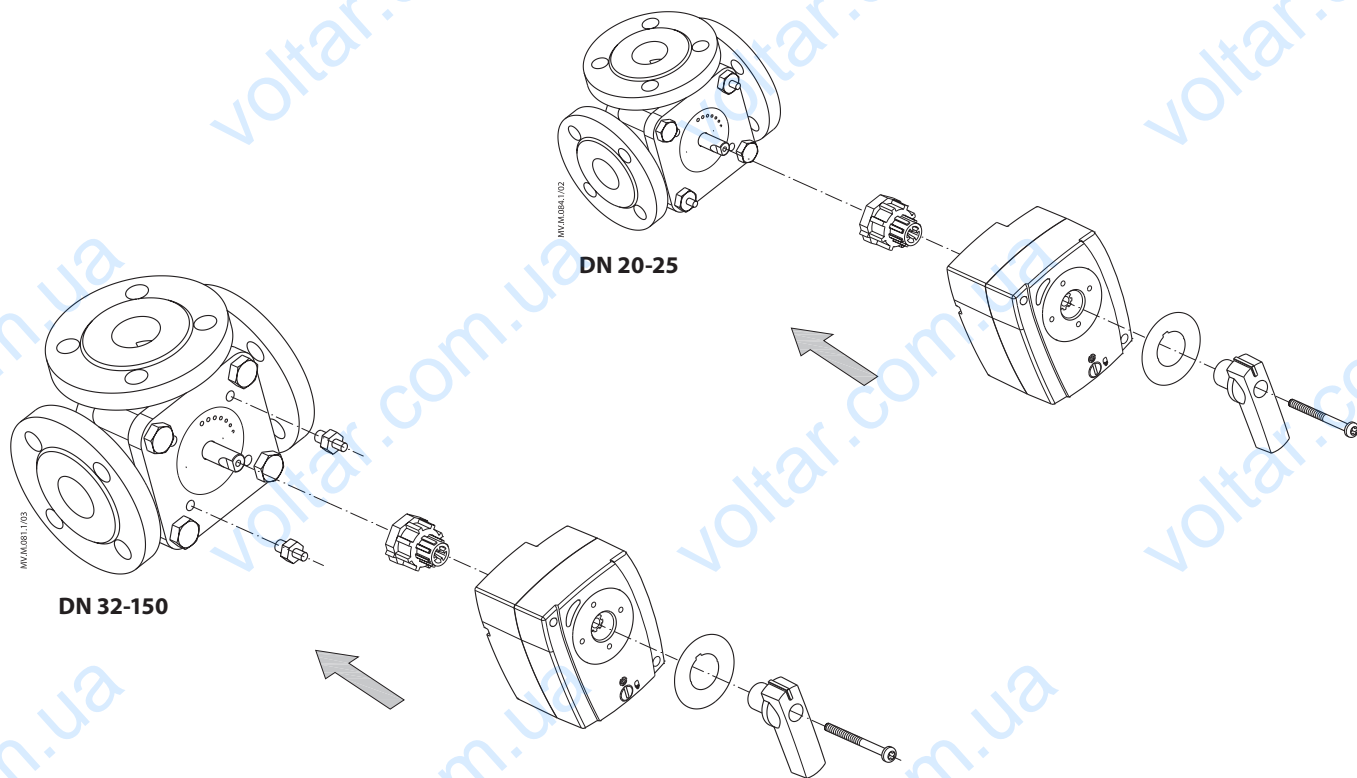


# Installation Guide HRB, HRE, HFE

## HRB 3, HRE 3

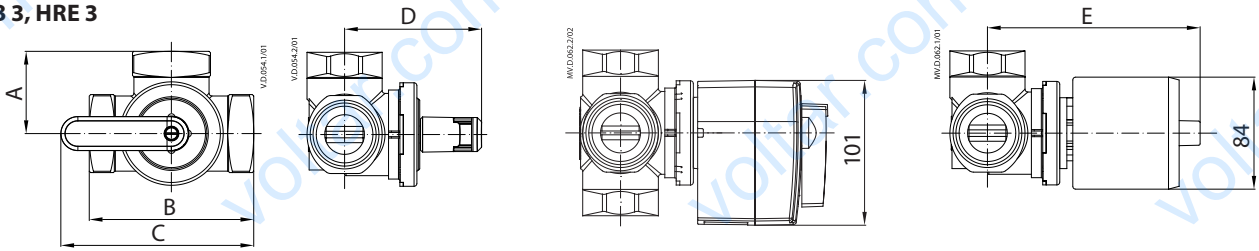

## HRB 4, HRE 4

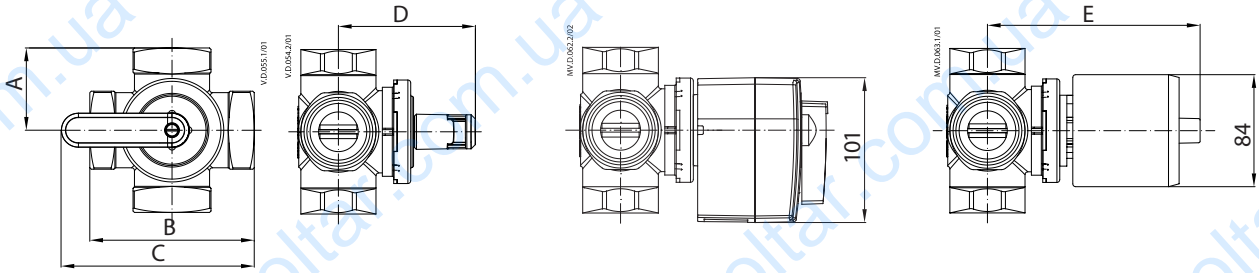


## HRB 3, HRB 4

DN	A	B	C	D	E	Connection	Actuator
	mm						
15	36	72	114	88	143	Rp 1/2"	AMB 162 AMB 182
20	36	72	114	88	143	Rp 3/4"	
25	41	82	119	92	147	Rp 1"	
32	47	94	125	97	152	Rp 1 1/4"	
40	58	116	136	97	152	Rp 1 1/2"	
50	62.5	125	140.5	103	158	Rp 2"	

## HRE 3, HRE 4

DN	A	B	C	D	E	Connection	Actuator
	mm						
20	52.5	105	130.5	88	140	Rp 3/4"	AMB 162 AMB 182
25	54	108	132	92	144	Rp 1"	
32	57.5	115	135.5	102	154	Rp 1 1/4"	
40	60	120	138	102	154	Rp 1 1/2"	
50	78	156	156	108	160	Rp 2"	

## HFE 3

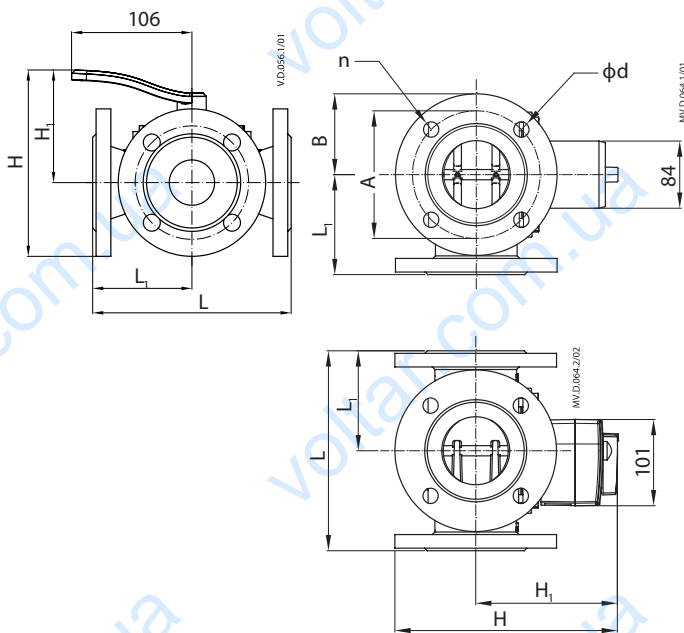

## HFE 3

DN	H	H <sub>1</sub>	L	L <sub>1</sub>	B	DC	φd	n	Actuator
	mm								
20	131	140	140	70	45	65	11,5	4	AMB 162 AMB 182
25	136	140	150	75	50	75	11,5	4	
32	152	146	160	80	60	90	15	4	
40	157	146	175	88	65	100	15	4	
50	171	155	195	98	70	110	15	4	
65	181	155	200	100	80	130	15	4	
80	208	167	235	118	95	150	18	4	AMB 182
100	228	177	265	133	105	170	18	4	
125	253	187	300	150	120	200	18	8	
150	271	192	350	175	133	225	18	8	